



Program Selector for Sliding Doors

1 - NO ENTRY

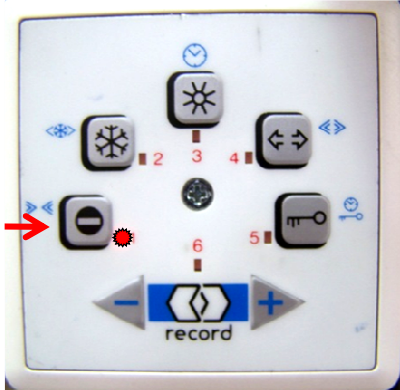


Allows people to leave but not enter

2 - WINTER MODE

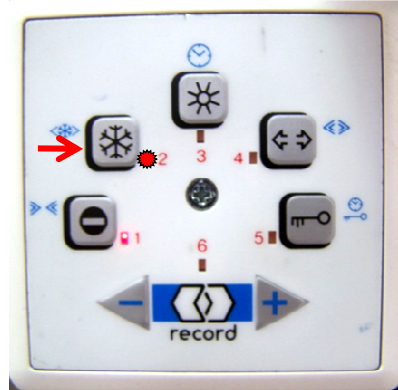


Reduced opening size to save heating

3 - AUTOMATIC

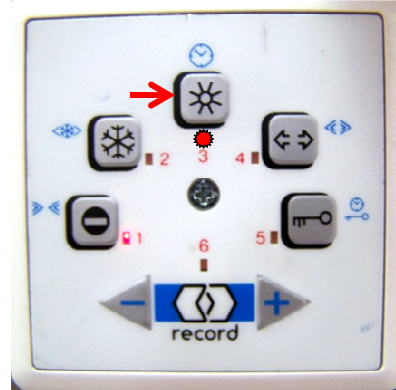


Normal Daytime Operation

4 - HOLD OPEN

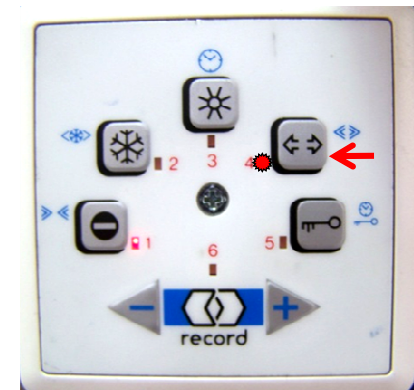


Press Once = Hold Open
Press Twice (Flashing) = Manual Mode

5 - LOCKED

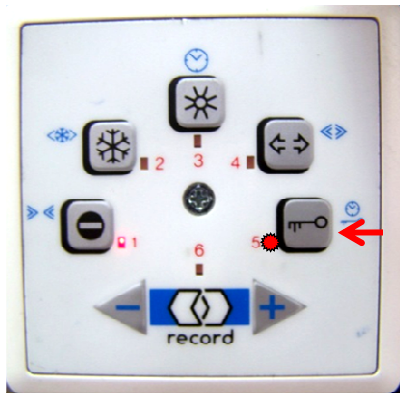

Night Setting - Doors Closed locked

6 - SETTING LOCKED

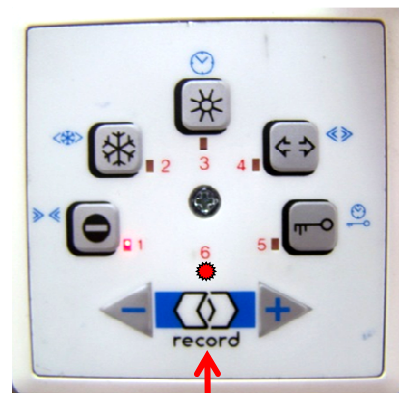

Follow the Procedure

To Lock the Programme Selector



Light No' 6 remains on with the selected programme setting

To Unlock the Programme Selector



Light No' 6 turns off